

## SYNC from an original Transmitter to a NEW transmitter

**Step1**

1. Turn both transmitters "OFF" by pushing the EMO button.

**Step2**

1. Press **A** once then press **B** once vice versa for 4 times. The Status LED blinks green and red. Press **1** until (> 5 secs) the "1" and "2" LED blinks faster, release the button.

**Step3**

1. Press **A** once then press **B** once vice versa 4 times. The Status LED blinks green and red. Press **2** until (> 5 secs) the "1" and "2" LED stay ON, then release the button. DONE!

Ps. Keep distance more than 50cm while doing the "copy"

→

## SYNC from a Receiver to a NEW Transmitter

**Step1**

Power the receiver. Press the SYNC. button >3 secs. The STATUS blinks.

Warning against electrical voltage

**SYNC.**

**Step2**

1. push the EMO button. 2. Press **A** once then press **B** once vice versa for 4 times. The Status LED blinks green and red. Press **2** until (> 5 secs) the "1" and "2" LED stay ON, then release the button. DONE!

Ps. Keep distance more than 50cm while doing the "copy"

## SYNC from a Transmitter to a NEW Receiver

**Step1**

Power the receiver. Press the SYNC. button >3 secs. The STATUS blinks.

Warning against electrical voltage


**SYNC.**

**Step2**

1. push the EMO button. 2. Press **A** once then press **B** once vice versa for 4 times. The Status LED blinks green and red. Press **1** until (> 5 secs) the "1" and "2" LED stay ON, then release the button. DONE!

Ps. Keep distance more than 50cm while doing the "copy"

## K Series

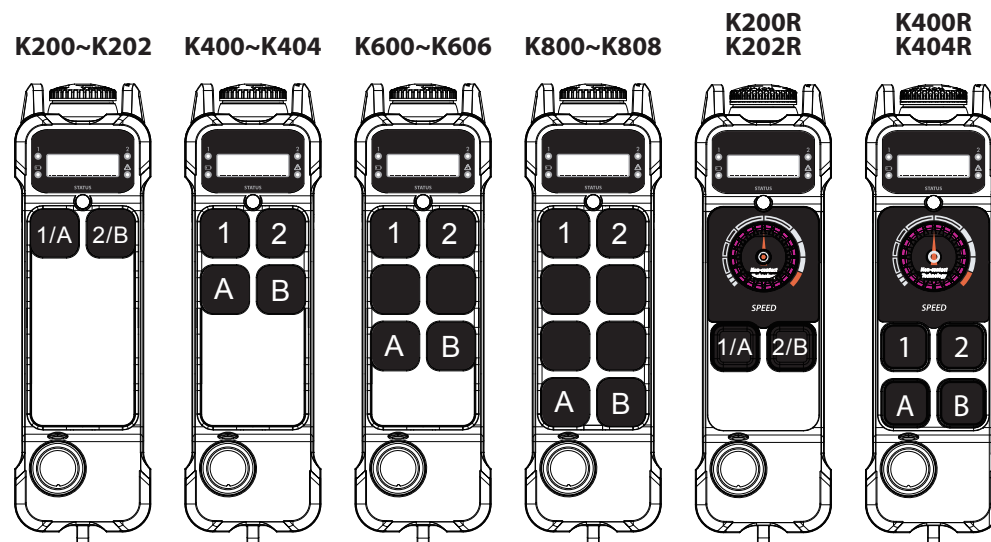

## K Series

